

Russell Hobbs®

INSTRUCTIONS AND WARRANTY



MODEL NO. RHCH16

**RUSSELL HOBBS
ULTRA MODERN INTELLI FAN HEATER**

Congratulations on purchasing our Russell Hobbs Ultra Modern Intelli Fan Heater. Each unit is manufactured to ensure safety and reliability. Before using this appliance for the first time, please read the instruction manual carefully and keep it for future reference.

FEATURES OF THE RUSSELL HOBBS ULTRA MODERN INTELLI FAN HEATER

IMPORTANT SAFEGUARDS


When using any electrical appliance, basic safety precautions should always be followed including the following:

1. Please read the instructions carefully before using the ceramic heater.
2. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
3. Incorrect operation and improper use can damage the heater and cause injury to the user.
4. The ceramic heater is intended for household use only. Commercial use invalids the warranty and the supplier cannot be held responsible for injury or damage caused when using the heater for any other purpose than that intended.
5. Avoid any contact with moving parts.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. Children should be supervised to ensure that they do not play with the appliance.
8. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid an electrical hazard.
9. Do not use the ceramic heater if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent
10. To reduce the risk of electric shock, do not immerse or expose the motor assembly, plug or the power cord to water or any other liquid.

11. Never immerse the unit in water or any other liquid for cleaning purposes.
12. Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
13. The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
14. A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
15. Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
16. Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
17. Do not use the ceramic heater on a gas or electric cooking top or over or near an open flame.
18. Use of an extension cord with the heater is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of the extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
19. This ceramic heater is not suitable for outdoor use. Do not use this appliance for anything other than its intended use.
20. DO NOT carry the heater by the power cord.
21. Do not leave this heater unattended during use. Always unplug the unit when not in use or before cleaning.
22. Always operate the heater on a smooth, even, stable surface. Do not place the unit on a hot surface.
23. Ensure that the switch is in the "Off" position after each use.
24. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, carpets, where openings may become blocked.
25. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
26. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.

27. Do not cover with clothing or place alongside inflammable objects such as cushions, newspapers or curtains, etc.
28. The sides are hot during operation, do not touch the heater while it is running.
29. The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
30. In case of technical problems, switch off the machine and do not attempt to repair it yourself. Return the heater to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned pre-cautions and instructions, could affect the safe operation of this machine.

PARTS DIAGRAM

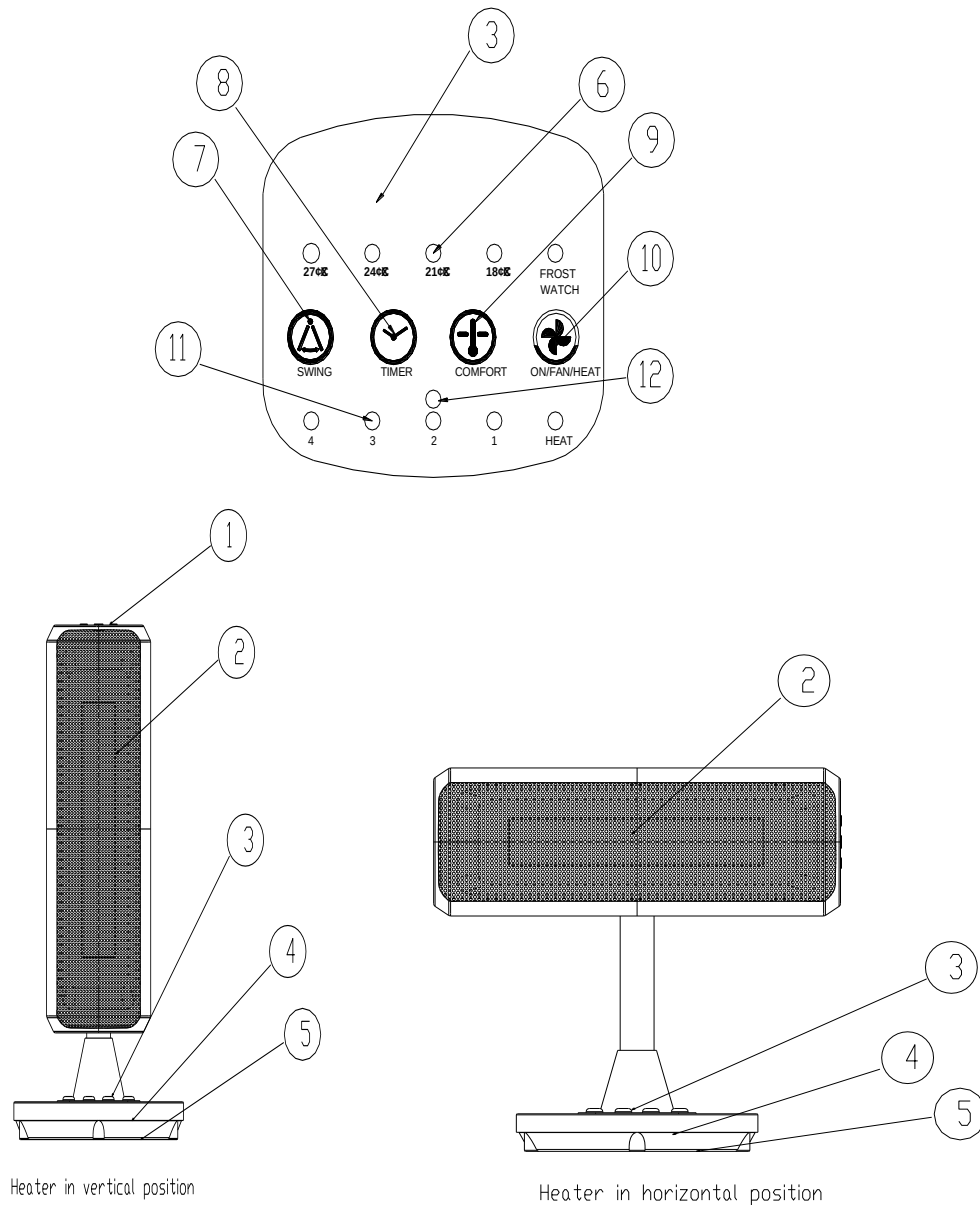

Main elements

- | | |
|---------------------------------|------------------------------|
| 1. Remote Control | 6. LED (for comfort setting) |
| 2. Front Grille | 7. Swing button |
| 3. Control Panel | 8. Timer button |
| 4. Base | 9. Comfort button |
| 5. Tip over switch (under unit) | 10. On/Fan/Heat button |
| | 11. LED (for timer & heat) |
| | 12. Remote Receiver |

OPERATING INSTRUCTIONS

- This heater is intended for use on a flat, stable surface, such as a floor, tabletop, shelf, or desk in a location where the airflow grille openings won't be obstructed. Keep all combustible material such as furniture, pillows, paper, clothes and curtains at least 3 feet (0.9m) away from the heater. Do not use in wet or moist locations, like bathrooms or laundry areas, or in areas where paint or other flammable or volatile liquids are used or stored.
- This heater can be performed in horizontal and vertical position. Rotate the body from vertical to horizontal position in clockwise direction until the "click" is reached and vice versa (horizontal to vertical by anticlockwise). DO NOT TURN IN WRONG DIRECTION. IT WILL BREAK THE INTERNAL STRUCTURE.

CAUTION: Be sure no other appliances are plugged into the same circuit with this heater/ fan. A circuit overload could occur.

Power

- Be sure the heater is on a flat and stable surface before plug in. Plug in to an AC outlet.
- Press the On/Fan/Heat button once to start the heater in fan mode only in continuous run. The ON light will light up and Heat LED will glow in green colour. No heating will occur in this mode.
- Press the button twice to change to a lower power in continuous run on 24°C temp setting. The ON light is still on and the heater's LED changes to an orange colour. Comfort 24°C LED will also be lit up.
- Press the button a third time to change to a higher power in continuous run on 24°C temp setting. The heater's LED changes to a red colour.
- Press the button again to turn the heater off. All lights are off.

Mode: Set Temperature

- Press the Comfort button to set the desired temperature during the power state (the power can be set from the above power setting instruction)

- The comfort LED for the different temperature settings will light up in sequence (Frost watch, 18°C, 21°C, 24°C, 27°C) when pressing the comfort button each time.
- The heater will switch off shortly after the desired temperature is reached and the power light will still on.
- The heater will turn back on when the room temp drops below the desired temperature.
- The temp control can be disabled if all comfort temperatures is set to be off. The heater will run continuously.
- For the frost watch features:
After set to frost watch mode, the heater will remain off unless the temperature drops below (40F/4°C). If this happens, frost watch will automatically cycle the heater on.

Mode: Set Timer

- Press the timer button to set the operation time.
- The LED display show the set time from 1 to 10 hours. If you press the timer button once it will set the time for an hour, press the button twice for 2 hours, and press the button 3 times for 3 hours and 4 times for 4 hours. If you want to set the timer for 5 or up to 10 hours continue pressing the timer button until the ideal time is set. For example if you want to set the timer for 5 hours, press the button once more after the 4 hour setting, number 4 and 1 will light up. This means timer is set for 5 hours (4 plus 1). If you want to set the timer for 8 hours press the timer button 8 times. Number 4,1 and 3 will light up for time set for 8 hours.
- The heater will turn off when the set time is passed. All settings will be cancelled and the heater needs to start again by pressing the on button if desired.
- The time can be disabled if all the LED display numbers is set to be off

Mode: Oscillation

- The oscillation feature functions in any power or mode setting in a VERTICAL and HORIZONTAL position.
- Press the oscillation button to select on and off.

Mode: Remote Control

- Two AG 13 or LR 44 buttons cells are required.
- The remote control works the same as the corresponding buttons on the control panel. The control display on the heater will show the appropriate icons when the various functions are activated.

SAFETY FEATURES

- This unit is equipped with a Safety Auto-Off, plus a safety Thermal Fuse. If the unit experiences excessive heat, the Safety Auto-Off will shut the unit off. If this happens, be sure the front and back grilles are not blocked and nothing is restricting airflow. Unplug the unit, let it cool down, and wait 10 minutes before plugging it back in to operate. If the unit fails to operate after 10 minutes, it may mean the heater has internal damage and that the Thermal Fuse has been tripped so the heater can no longer operate.
- The Motion Off Detection Feature will cut the heater & fan power if the unit falls over in any direction or is lifted (such as if you move it to another part of the room). The Tip-Over Switch will cut the power if the unit is knocked over forward or backward (for example, if a pet accidentally tips it over). Do not attempt to defeat this safety feature.
- The power indicator shows that the heater is switched on and operating. It continues to glow even if the thermostat has cycled and the heating elements are off. Note that even though this unit has a Cool-Touch Housing, both the front and back grilles will get hot. Be careful not to touch them.
- When the sensor temp is over 48°C, there will be abnormal display on LED. The machine should be unplugged to cool down below 48°C before operating again.
- When the thermostat, fuse or tip over switch is activated, the machine is off but the LED shows at normal.

CLEANING AND MAINTENANCE

- This appliance is for household use only and is not user-serviceable.
- Do not open or change any parts by yourself. Please refer to a qualified electrical service department or return to the supplier if servicing is necessary.

- Always remember to unplug the unit from the electrical outlet when not in use and before cleaning. Ensure that the heater is switched off.
- The body of the appliance and the stand should be cleaned with a damp cloth. Do not let water enter the appliance or the stand.
- Do not use bleach or other abrasive substance or solvents to clean your appliance as it can be damaging to the finish.
- Do not immerse the heater in water or any other liquid, or hold it under a running tap to clean.
- To remove stubborn spots/marks, wipe the surfaces with a cloth slightly dampened in soapy water or mild non-abrasive cleaner.

STORING THE APPLIANCE

- Unplug the unit from the wall outlet and clean all the parts as instructed above. Ensure that all parts are dry before storing.
- Store the appliance in its box or in a clean, dry place.
- Never store the appliance while it is dirty.
- Never wrap the power cord around the appliance.

SERVICING THE APPLIANCE

There are no user serviceable parts in this appliance. If the unit is not operating correctly, please check the following:

- You have followed the instructions correctly
- That the unit has been wired correctly and that the wall socket is switched on.
- That the mains power supply is ON.
- That the plug is firmly in the mains socket.

If the appliance still does not work after checking the above:

- Consult the retailer for possible repair or replacement. If the retailer fails to resolve the problem and you need to return the appliance, make sure that:

- The unit is packed carefully back into its original packaging.
- Proof of purchase is attached.
- A reason is provided for why it is being returned.

If the supply cord is damaged, it must be replaced by the manufacturer or an authorised service agent, in order to avoid any hazard. If service becomes necessary within the warranty period, the appliance should be returned to an approved Tedalex Trading (Pty) Ltd service centre. Servicing outside the warranty period is still available, but will, however, be chargeable.


CHANGING THE PLUG

Should the need arise to change the fitted plug, follow the instructions below.

This unit is designed to operate on 230V-240V current only. Connecting to other power sources may damage the appliance. Connect a three-pin plug as follows:

The wires in this mains lead are coloured in accordance with the following code:

Green/Yellow = Earth
Blue = Neutral
Brown = Live

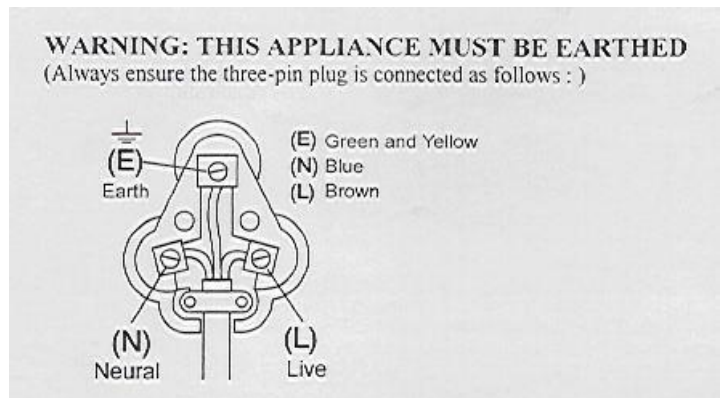

**PLEASE AFFIX YOUR PROOF OF PURCHASE/RECEIPT HERE
IN THE EVENT OF A CLAIM UNDER WARRANTY THIS RECEIPT MUST BE
PRODUCED.**

W A R R A N T Y

Tedex Trading (Pty) Limited ("the Supplier") warrants to the original purchaser of this product ("the Customer") that this product will be free of defects in material and workmanship which under normal, personal, family or household purpose manifest themselves within a period of 365 days from the date of purchase or in respect of commercial or professional purposes, manifest themselves within a period of 90 days from the date of purchase. Any claim in terms of the warranty must be supported by a proof of purchase. If such proof is not available, then notwithstanding anything to the contrary herein, the Supplier's normal charge for service and/or spares will be payable by the Customer upon collection of the repaired product. If a claim is made in terms of the aforesaid warranty within the first 7 days from the date of purchase, the faulty product will be exchanged (provided that the product is in its original packaging with all accessories). Failing return of the product within 7 days, the Supplier's liability shall be limited on return to the Supplier of the product or parts thereof, to the replacement or repair (in the sole discretion of the Supplier, or its duly authorised service dealer) of the product to eliminate any defect in workmanship or materials found to be due exclusively to any acts or omissions on the parts of the Suppliers, of which defects the Supplier shall have been notified in writing by the Customer within the aforesaid warranty period. The warranty provided herein and the obligations of the Supplier as aforesaid are in lieu of, and the Customer waives, all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the Supplier in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use, this product and whether or not occasioned by the Supplier's negligence (gross or otherwise) or any act or omission on its part. The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, abuse or any non-authorised modification of the product. The warranty does not include replacement of light bulbs, heater bars, paper bags or any glass, plastic bowl or jug or other expendables. During the warranty period the product should be taken to a service centre of the Supplier or one of its duly authorised service agents. The Supplier neither assumes nor authorises any other person to assume for it, any additional liability in connection with the sale or servicing of its products.

TEDELEX TRADING (PTY) LTD

JOHANNESBURG
29 HERONMERE ROAD
P O BOX 39186
BOOYSENS, JOHANNESBURG, 2016

TEL NO. (011) 490-9000

CAPE TOWN

TEL NO. (021) 535-0600

DURBAN

TEL NO. (031) 792-6000

www.russellhobbs.co.za